



## SINGER SEWING MACHINE STITCH



## How To Select a Stitch on Singer Machine?

Alright, so picking a stitch on your Singer machine is actually super simple. First, look at your stitch selector dial. You'll see all the little symbols.





Adjust Singer Sewing Machine  
Stitch Length



Press The Pedal To Sew



Keep The Stitch Even By Pausing

 
## Singer Sewing Machine Stitch Guide



Look For Puckering Or Looping



Finish the Stitch

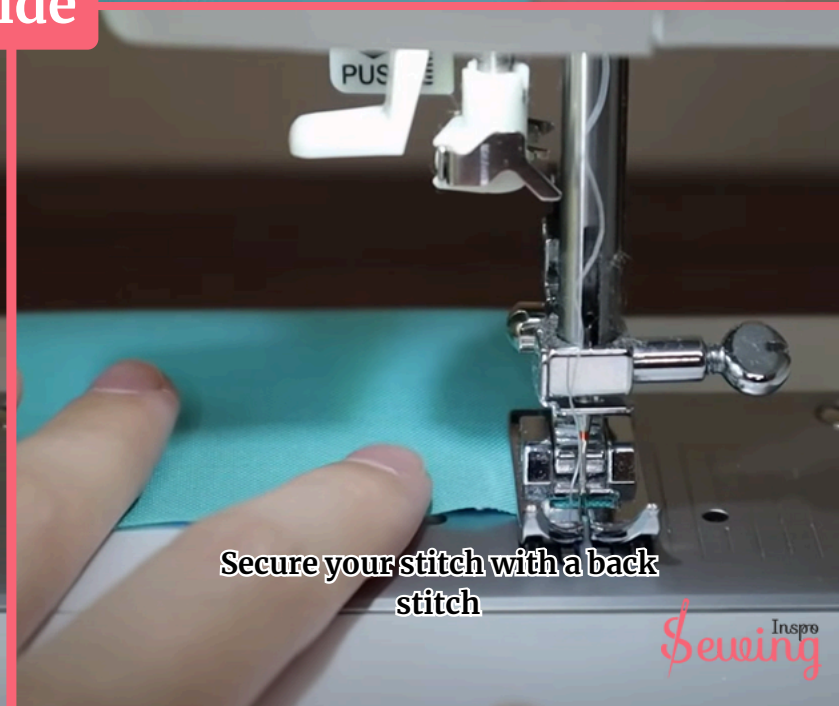

Secure your stitch with a back  
stitch

## Adjust Singer Sewing Machine Stitch Length



**Press The Pedal To  
Sew**



**Keep The Stitch  
Even By Pausing**



**Look For  
Puckering Or  
Looping**



 
 
  
**Finish the Stitch**



**Secure your  
stitch with a  
back stitch**



# Singer Sewing Machine Stitch Patterns

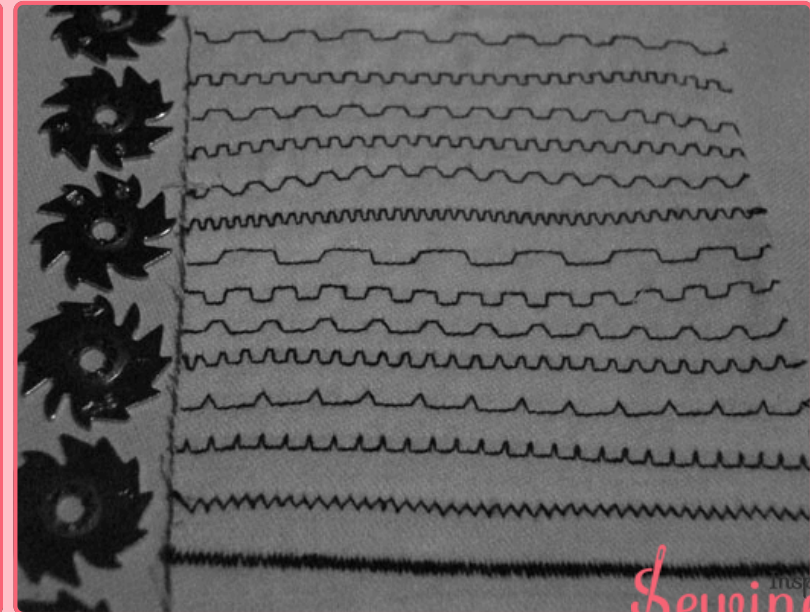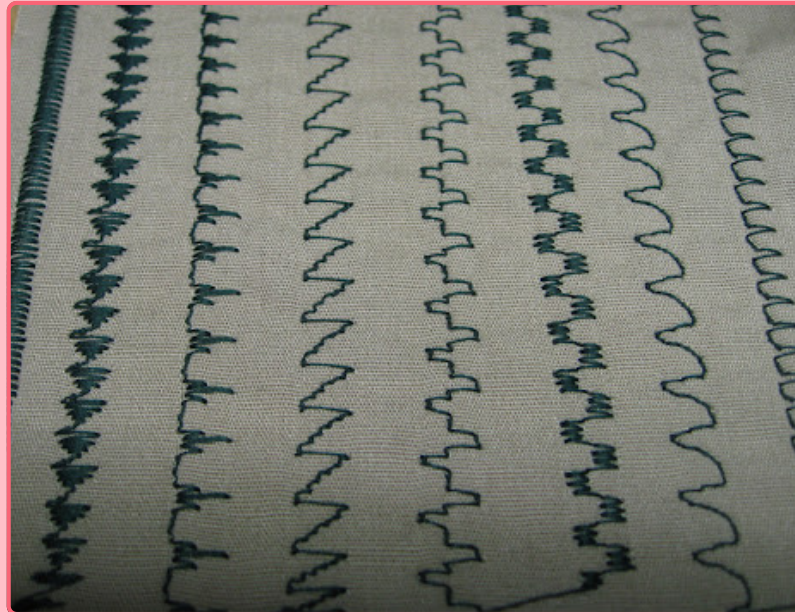

# What Are The Stitch Options For The Singer Tradition?



**Straight Stitch**



 
**Zigzag Stitch**




**Buttonhole Stitch**



**Blind Hem Stitch**

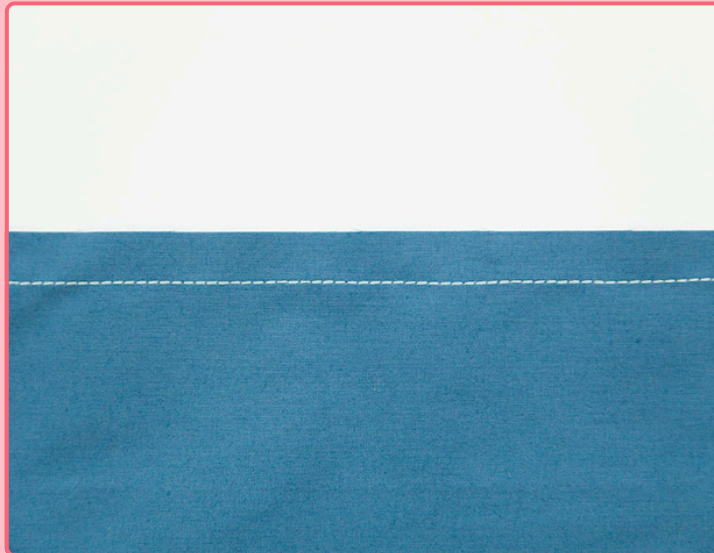

**Stretch Stitch / Triple Stretch**

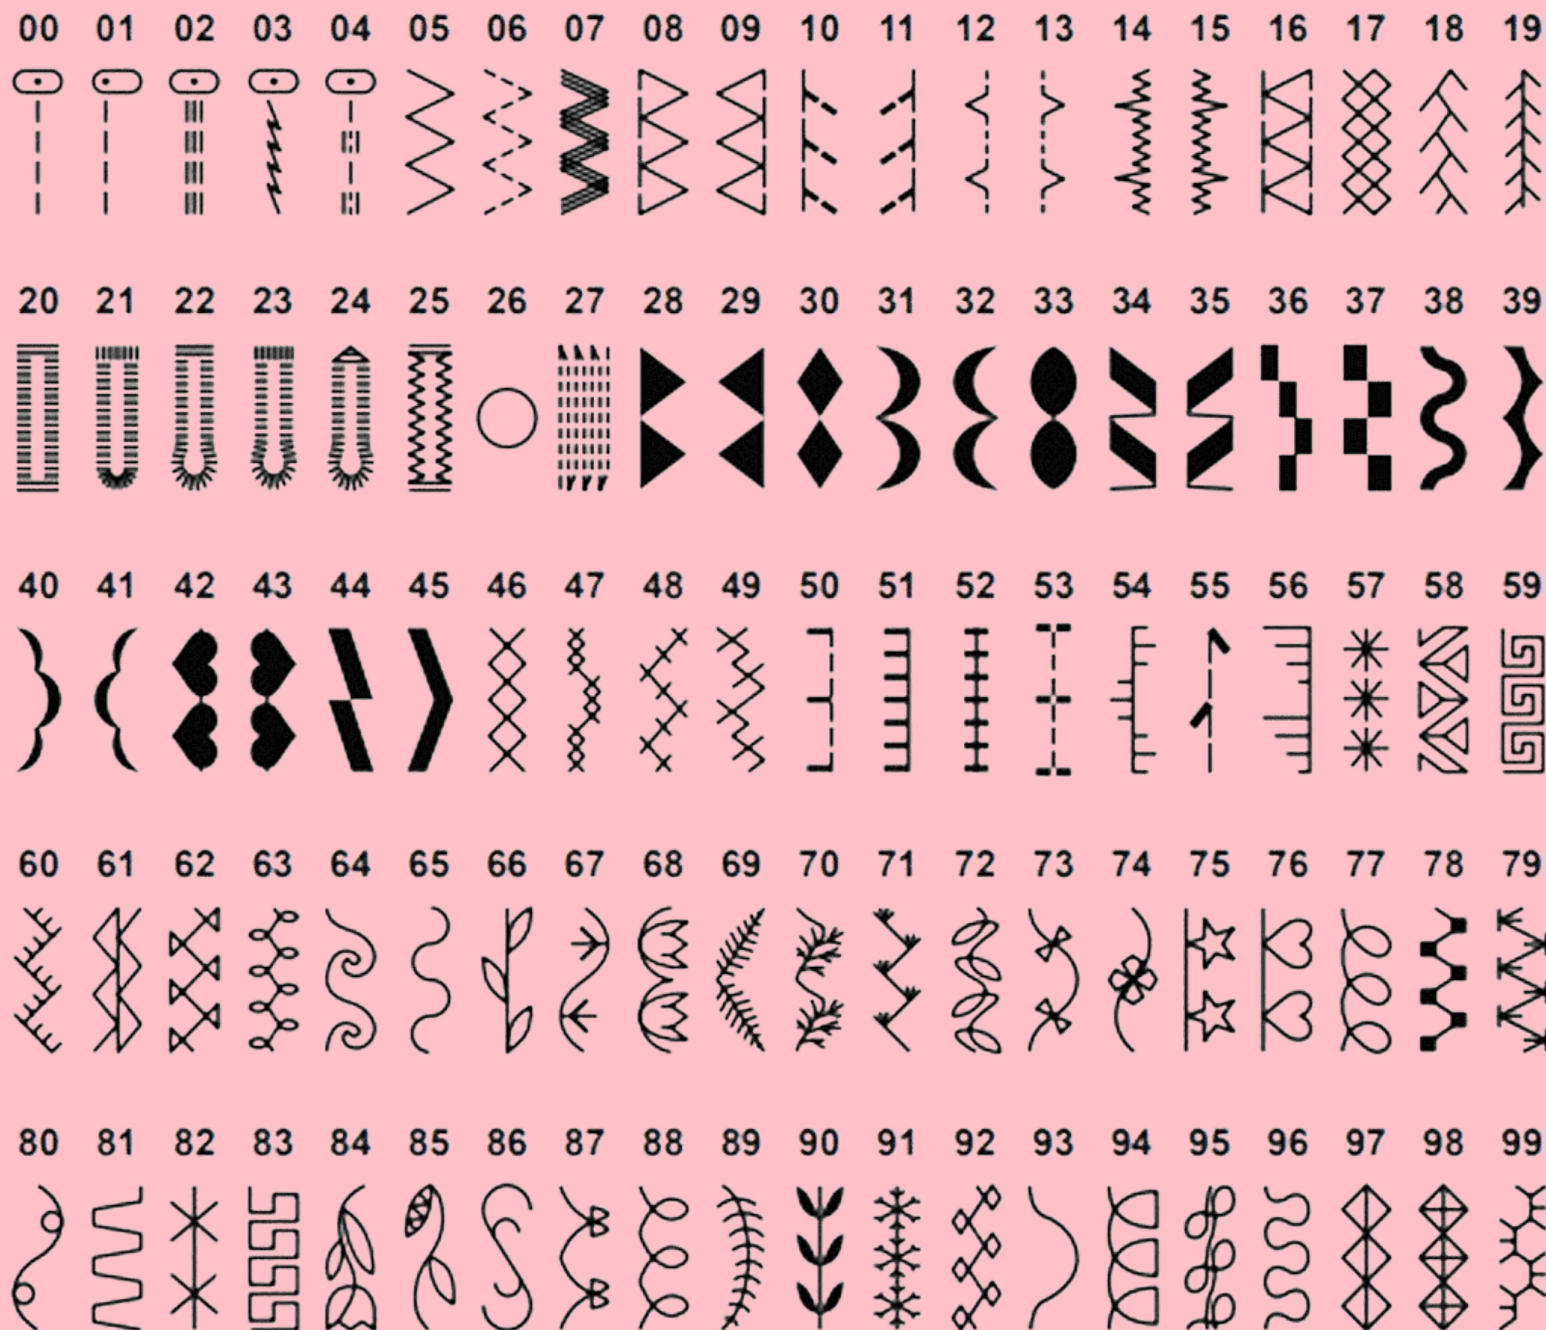 

*Sewing* Inspo

## Singer Sewing Machine Stitch Symbols